


Cardiac Arrest Bleeps – Daviscomms Br802

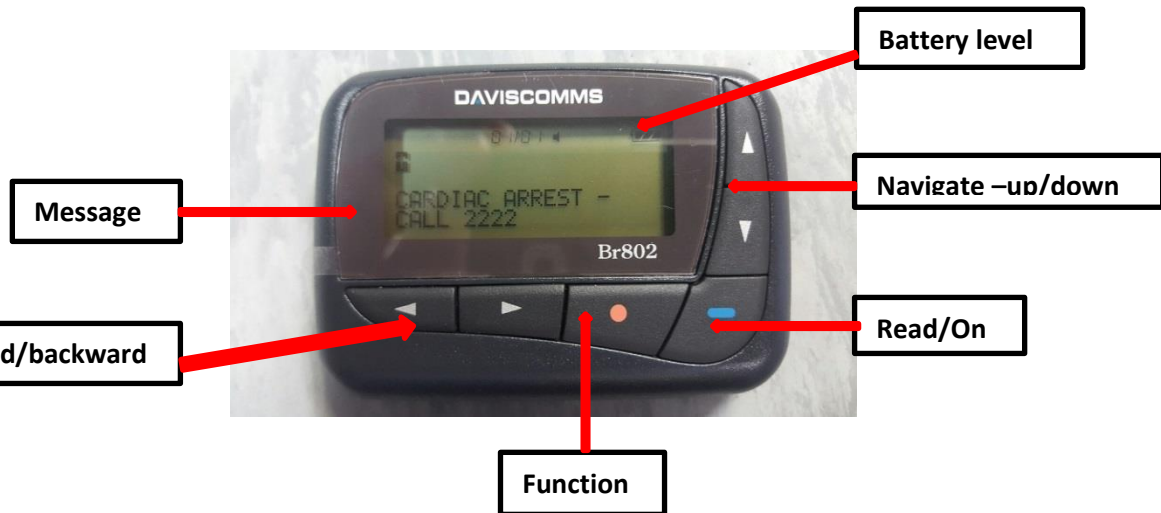

- **Turn on** - press and hold 'Read/On' button for 2 seconds
- **Battery** - check battery level – if low (1-2 bars) change battery – unlock and slide door, insert AA battery, turn bleep back on.
- **Messages**

When the bleep is activated, by switchboard it will alarm continuously, a message will initially appear on the screen, press the blue read button to confirm message read and to stop the alarm.

If the message has gone off the screen, press the blue read button until the last message appears.

Messages that will be displayed are:

- Cardiac test – please call switchboard
- Cardiac arrest – zone & number (e.g. A12)
- Cardiac arrest – location (e.g. ground floor multi story)
- Call cancelled – zone & number or location
- 2222 (Ring switchboard on 2222 to confirm location)

All messages detailing the location will be immediately followed by a 2222 message on your cardiac arrest bleep.

- If you have just received a message detailing the location you **DO NOT** need to ring switchboard
- If you receive a 2222 message in isolation you **MUST** ring switchboard to confirm the location

If a letter E appears at the start of any message this indicates an error – ring switchboard to confirm accurate details.

- **You must confirm bleep working on handover** - dial 78 – as prompted enter cardiac arrest bleep number then key any number when prompted for extension number, bleep should activate

Any Bleep Problems contact switchboard immediately